


# BBQ's Instructions for use

BBQ Buttons

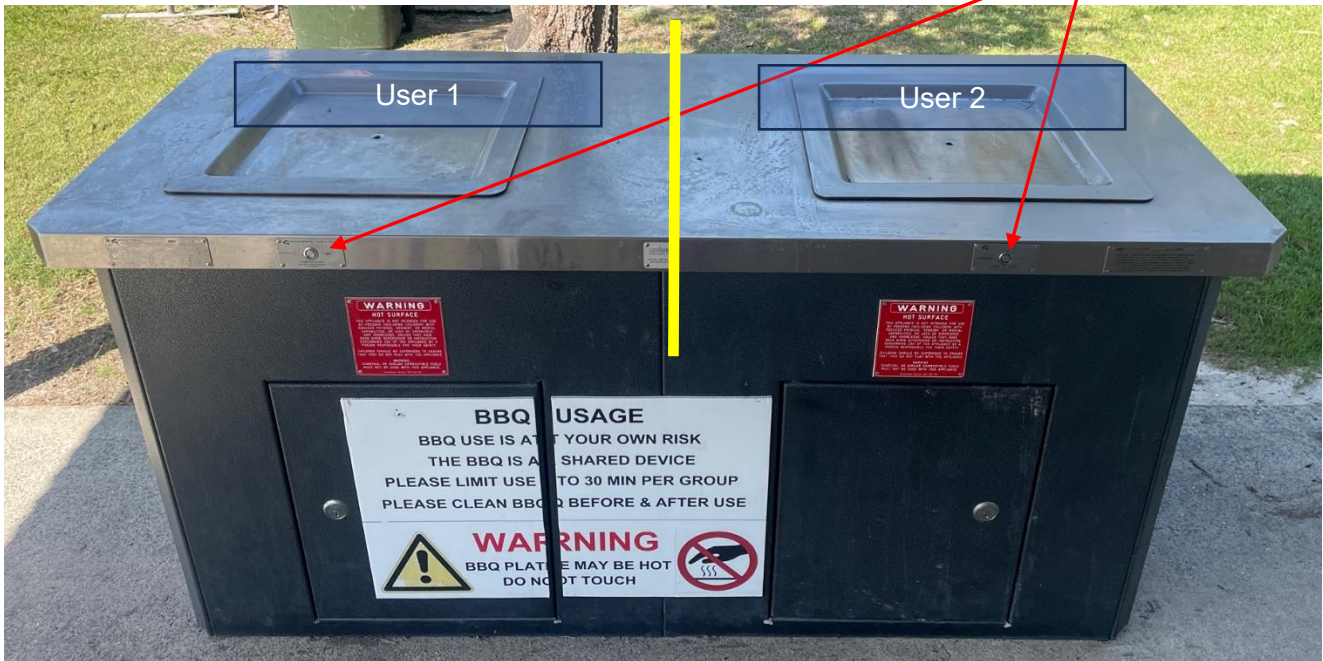

## WARNING

### BBQ USAGE

BBQ USE IS AT YOUR OWN RISK  
THE BBQ IS A SHARED DEVICE

PLEASE LIMIT USE TO 30 MIN PER GROUP  
PLEASE CLEAN BBQ BEFORE & AFTER USE



**WARNING**  
BBQ PLATE MAY BE HOT  
DO NOT TOUCH



### WARNING HOT SURFACE

THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY, OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.

**WARNING**  
CHARCOAL OR SIMILAR COMBUSTIBLE FUELS MUST NOT BE USED WITH THIS APPLIANCE.

Greenplate Service: 0411 845 534

## USING THE BBQ

1. Push the button and red light will appear to start the 28 minutes cooking cycle (If light flashes on switch on, please press it again)
2. Please allow 8 minutes for the hot plate to heat up
3. Ensure plate is clean prior to use

Continual pressing of the button may cause the hotplate to enter tamper mode and switch off for 5 minutes.